

PM

Exploded view diagram of a PM (Pump Motor) assembly, showing components 1 through 62. The diagram illustrates the assembly of the motor housing, pump head, and various internal components like the impeller, shaft, and bearings. A large arrow points from the PM assembly towards the PMA assembly.

PM

Exploded view diagram of a PM (Pump Motor) assembly, showing components 1 through 62. The diagram illustrates the assembly of the motor housing, pump head, and various internal components like the impeller, shaft, and bearings. A large arrow points from the PM assembly towards the PMA assembly.