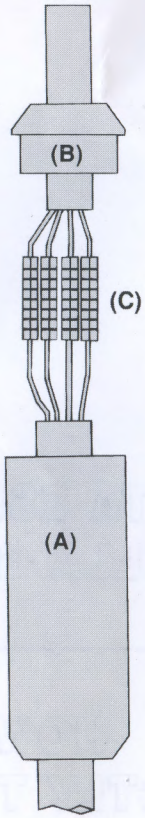

CORRETTA ESECUZIONE DELLA GIUNZIONE

1) Inserite il cavo di uscita pompa nel tubetto in gomma (A).
2) Sguainate il cavo con i relativi conduttori, sui quali andrete ad applicare i 4 connettori (C) come indicato nella figura.
3) Inserite il cavo di prolunga nel tappo in gomma (B) e sguainate lo stesso come per il cavo uscita pompa.
4) Eseguite la giunzione dei tre conduttori più il filo di terra, rispettando i colori.
5) Versate completamente il contenuto del catalizzatore (boccettina piccola) nella resina (boccetta grande) e mescolate lentamente per due minuti.
6) Mettete in posizione le giunzioni all'interno del tubetto (A) e versate la resina fino a 4 - 5 mm dal bordo.
7) Infilate il tappo (B) nel tubetto (A) e lasciate il tutto immobile per 12 ore.

HOW TO MAKE CORRECTLY THE CABLE JUNCTION WITH OUR KIT

1) fit the outlet pump cable into the rubber pipe (A).
2) unsheath the cable with its electric wires, in which you have to apply the four connectors (C) as indicated in the picture.
3) fit the cable extension into the rubber plug (B) and unsheath the same as for the outlet pump cable.
4) make the junction of the three electric wires and the ground wire taking care of the colours.
5) pour the all catalyst contents (small bottle) into the resin (big bottle) and mix for two minutes very slowly.
6) insert the junctions into the rubber pipe and pour the resin as far as 4 - 5 mm from the rim.
7) fit the plug (B) into the pipe (A) and let the whole stand for 12 hours (motionless).